
Interlift Inc.


15939 Piuma Avenue Cerritos, CA 90703 Phone: 888-774-5844 Fax: 562-924-8318

Email: technicalsupport@interlift.net





ILT- Series

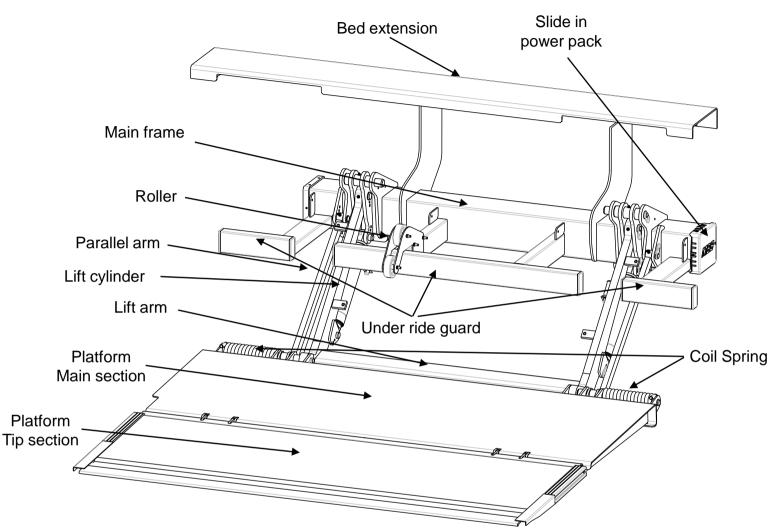

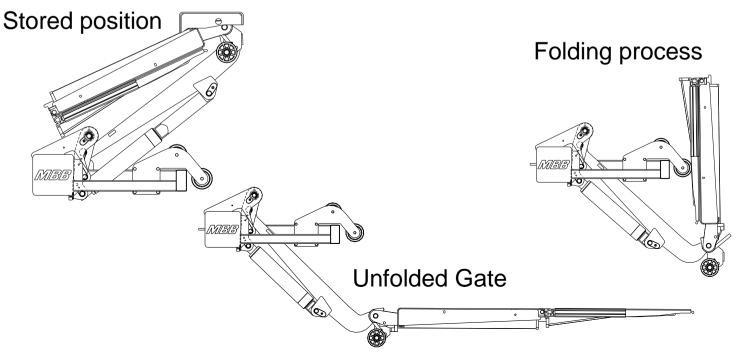


Lower down gate - functional description

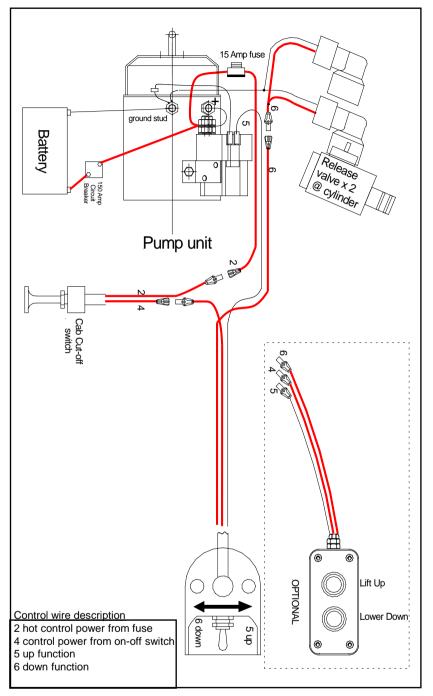


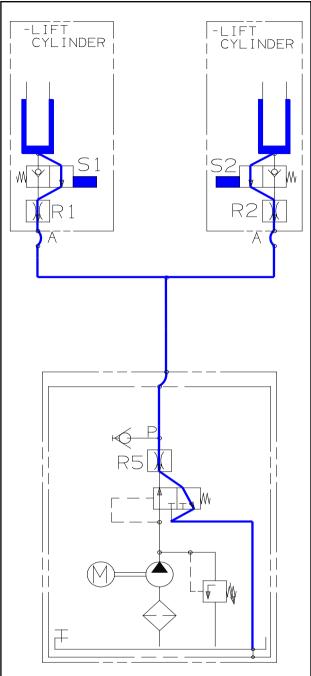

- Pump and Motor power is supplied by the battery, protected by a 150 Amp Circuit Breaker
- Control power is protected by 15 Amp fuse connected to positive motor solenoid stud
- 1. To turn on gate activate Cab cut-off switch control power gets routed to switches (#4 hot)
- 2. Activate the down function at toggle switch or at hand control (optional)(#6 hot)
- 3. Power gets routed to the release valves (S1 and S2) at the lift cylinders to open up the valves
- 4. Hydraulic fluid gets released out of the cylinders and is flowing back into the reservoir

Lift up gate - functional description

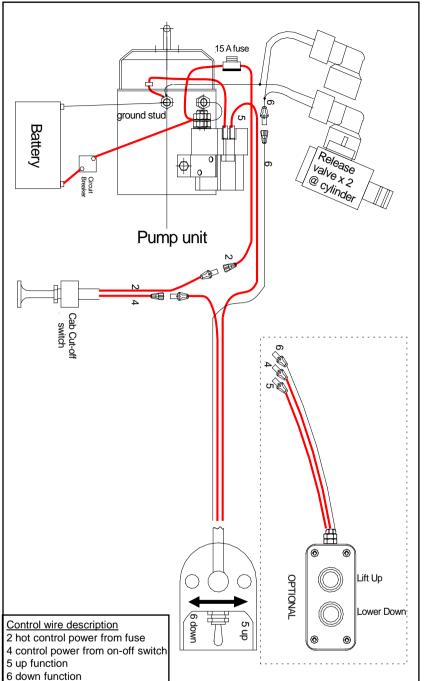

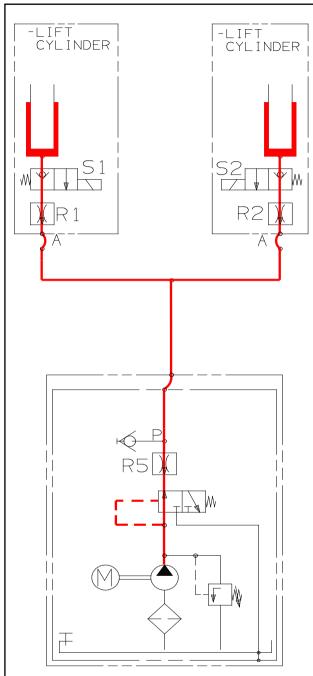

- Pump and Motor power is supplied by the battery, protected by a 150 Amp Circuit Breaker
- Control power is protected by 15 Amp fuse connected to positive motor solenoid stud
- 1. To turn on gate activate Cab cut-off switch control power gets routed to switches (#4 hot)
- 2. Activate the up function at toggle switch or at hand control (optional) (#5 hot)
- 3. Power gets routed to the motor solenoid, which makes contact to activate motor
- 4. Hydraulic fluid gets pumped through the valves into the cylinders
 - → piston rods extend lift gate raises up