

Working diagrams Palfinger P 220BK

on

MB Sprinter 3,5t

The working diagrams shown below have the following preconditions:

Solid line:

Standard working diagram

Working height = height of basket bottom + 2.0 m

The basket is in basic position (not turned) and retracted

The following applies generally:

All specifications refer to standard aluminum basket without additional equipment

Maximum inclination 0,5°

Set-up inclination is max. 5° with automatic range adjustment.

Note on working diagram:

Additional attachments that deviate from the standard reduce range and basket load

Special baskets have different ranges

Reach at plastic workman basket ~ 0,6m - 0,9m reduced

Permitted maximum basket load according to technical description

The outreaches are approximate dimensions and depend on the chassis, the type of support and the lifting platform's additional equipment.

Illustrations of truck and unit are only of symbolic nature and do not allow any conclusions regarding technical design.


Subject to technical change!



Rear view

Extension of stabiliser Front left 100% outrigger Front right 100% Rear left 100%


Rear right 100%

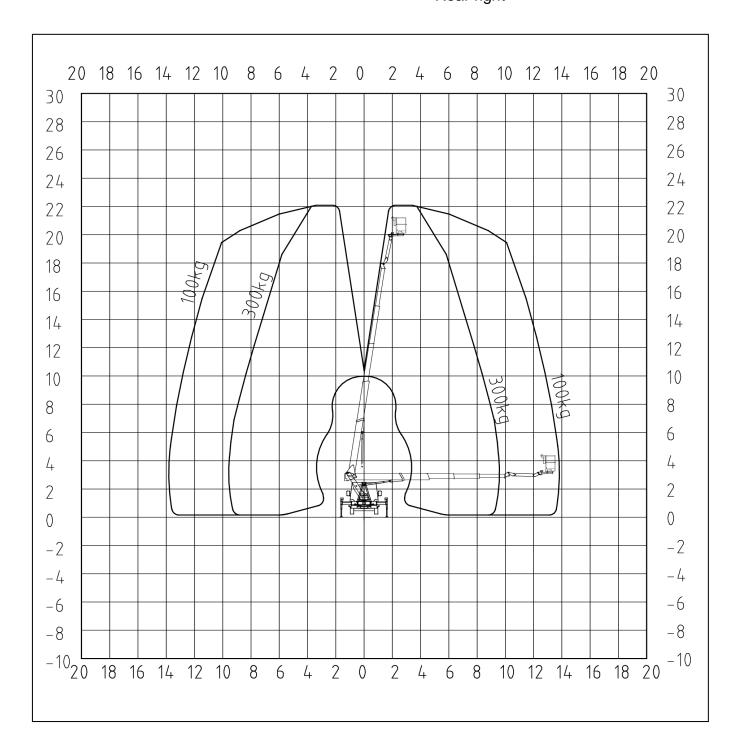



Top view


Extension of stabiliser Front left 100% outrigger Front right 100% Rear left 100%

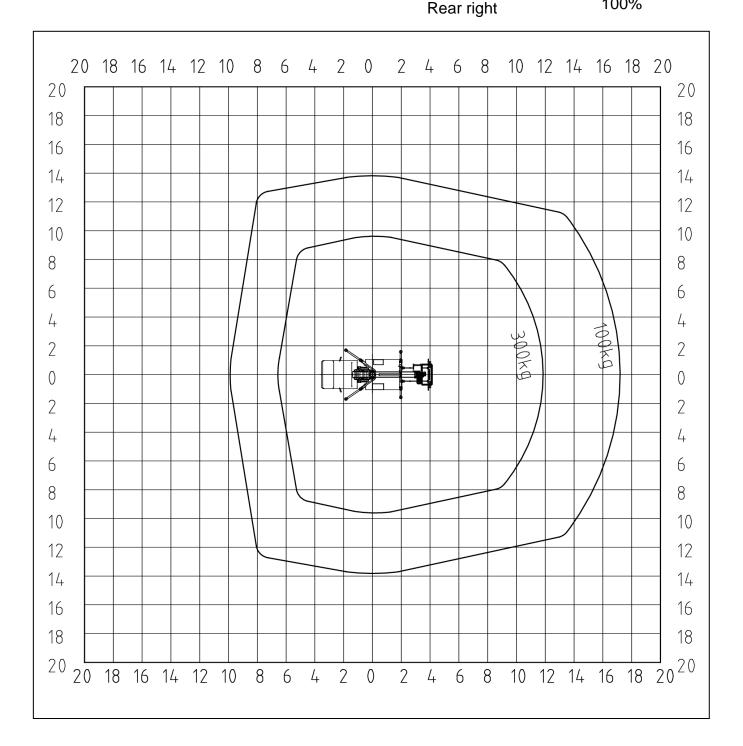



Left view

Extension of stabiliser Front left 100% outrigger Front right 100% Rear left 100% Rear right 100%

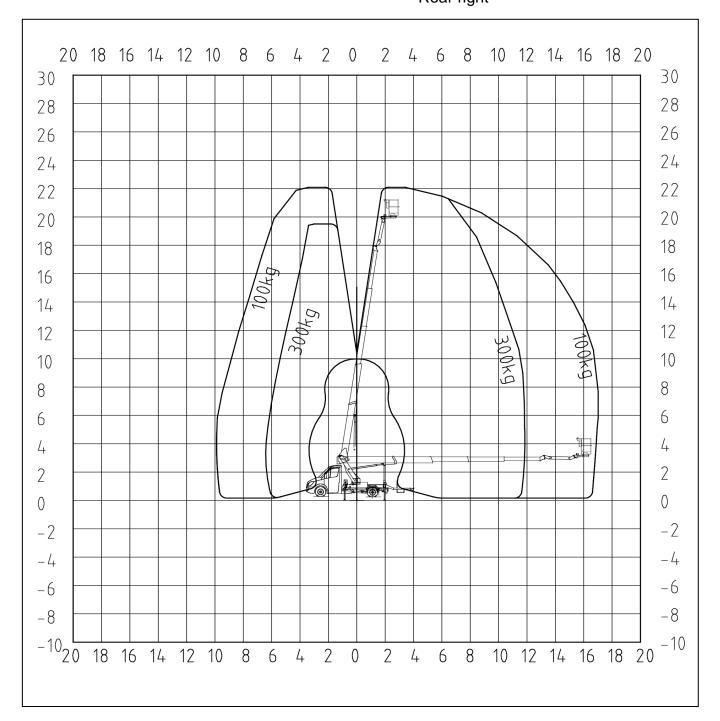




Rear view


Extension of stabiliser Front left 0% outrigger Front right 100% Rear left 0%

Rear left 0% Rear right 100%

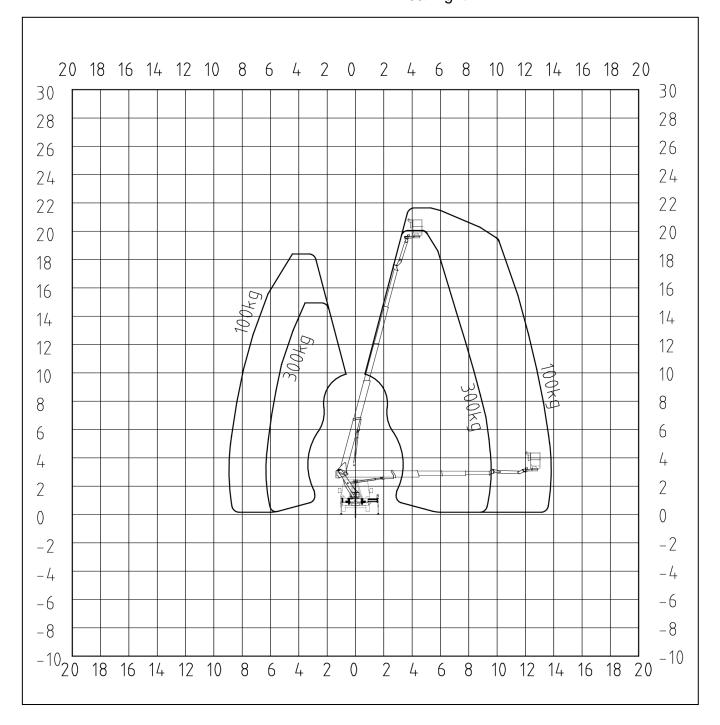




Top view

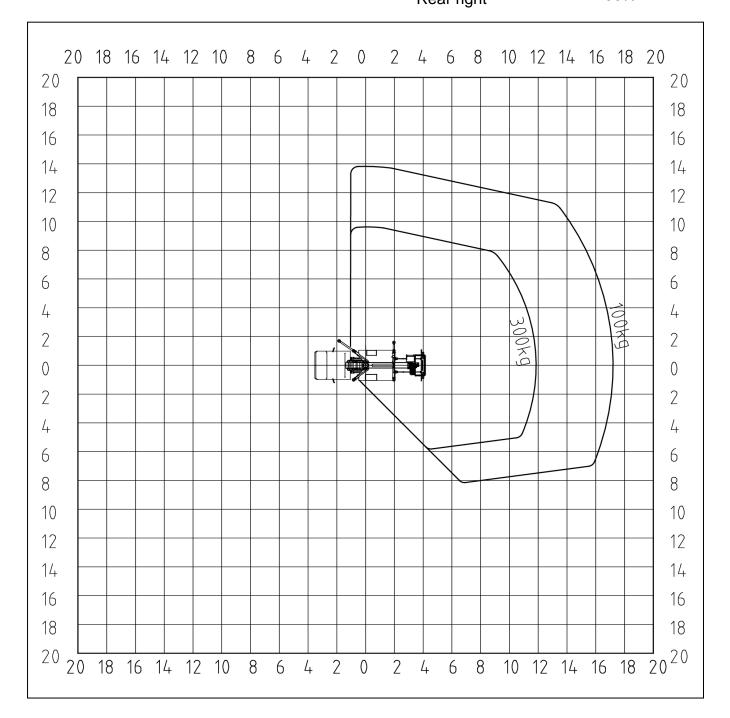



Top view

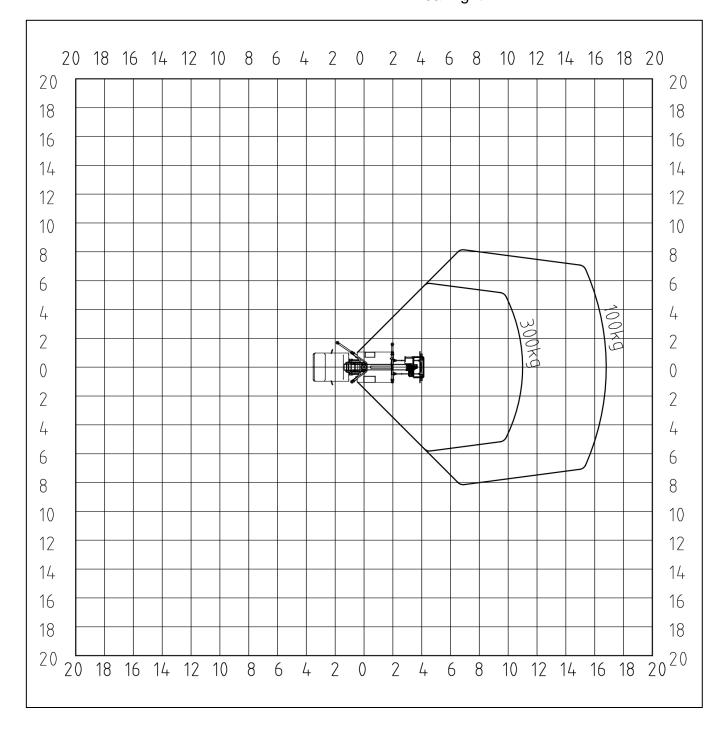



Left view

Extension of stabiliser outrigger

 $\begin{array}{lll} \text{Front left} & 0\% \\ \text{Front right} & 100\% \\ \text{Rear left} & 0\% \\ \text{Rear right} & 100\% \\ \end{array}$

