


Subject to change, production tolerances have to be taken into account.

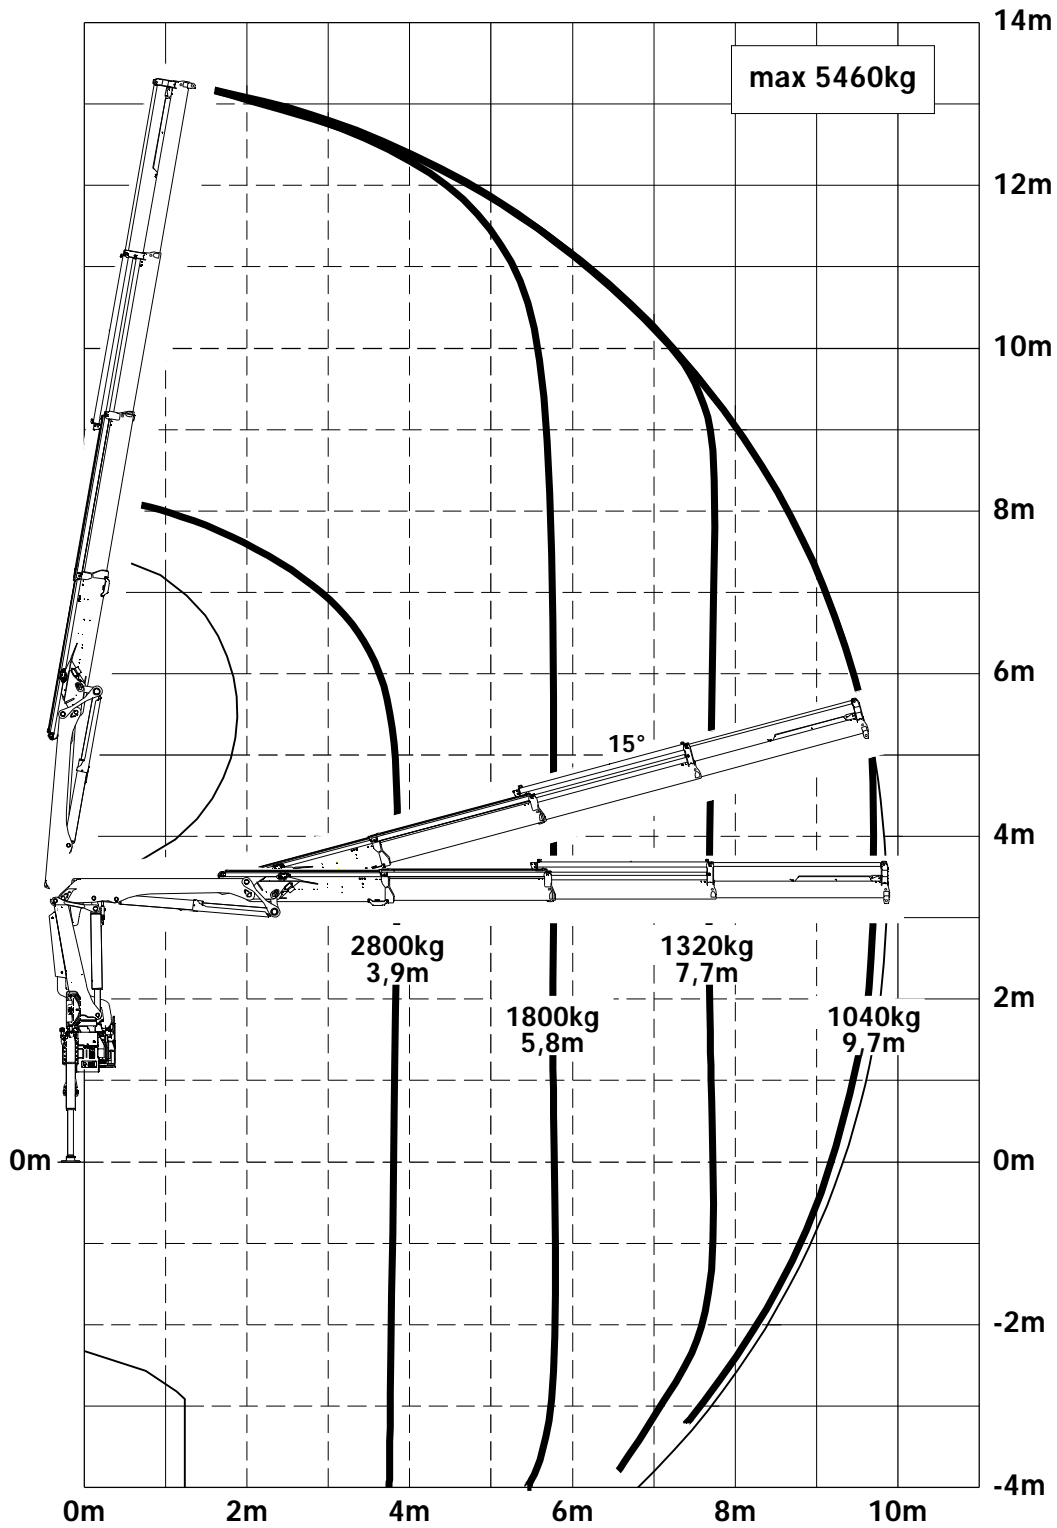

Symbolic crane figure, indications at 20° main boom position & load arm in horizontal position



For Rope winch load capacity refer to page
Page 020.21200

